

Support spacing for SDR-7.4 Solidwall

Hanger Spacing (in.) at Temperature (°F)

Nominal Diameter	68°	86°	104°	122°	140°	158°	176°
1/2	29	27	25	24	23	22	21
3/4	33	31	29	28	26	26	24
1	39	36	34	33	31	30	29
1-1/4	44	42	39	38	36	35	33
1-1/2	49	46	44	43	41	40	38
2	55	52	50	48	46	45	44
2-1/2	60	57	54	53	51	50	48
3	65	63	60	58	56	54	52
4	72	69	66	64	61	60	58
4-1/2	82	78	74	72	69	68	65

Support spacing for SDR-11 Solidwall

Hanger Spacing (in.) at Temperature (°F)

Nominal Diameter	68°	86°	104°	122°	140°
1/2	25	24	22	21	20
3/4	29	27	26	24	23
1	34	32	30	29	27
1-1/4	39	37	35	33	31
1-1/2	44	43	40	38	36
2	50	48	45	44	42
2-1/2	54	52	49	48	46
3	59	57	54	52	50
4	66	63	60	58	56
4-1/2	74	71	67	65	63
6	88	84	80	78	74
8	98	94	89	87	83
10	110	105	100	97	93
12	123	118	112	109	105
14	131	125	119	115	111
16	139	133	126	122	118
18	147	141	134	130	125
20	155	148	141	137	132



Support spacing for SDR-11 Watertec™

Hanger Spacing (in.) at Temperature (°F)

Nominal Diameter	68°	86°	104°	122°	140°	158°	176°
1/2	39	33	33	33	30	27	24
3/4	39	39	36	33	33	30	30
1	45	45	42	39	39	36	33
1-1/4	51	48	48	45	42	42	39
1-1/2	57	57	54	51	51	48	45
2	63	60	57	57	54	51	51
2-1/2	69	69	66	63	63	60	57
3	75	72	69	69	66	63	57
4	78	75	75	69	69	66	63
4-1/2	84	81	81	75	72	69	63
6	84	81	81	75	72	69	63
8	96	90	90	84	81	78	75
10	108	102	99	96	90	87	81



Support spacing for SDR-17 Climatec pipe™

Hanger Spacing (in.) at Temperature (°F)

Nominal Diameter	68°	86°	104°	122°	140°	158°	176°
1/2	30	30	30	30	27	24	21
3/4	36	33	33	30	30	27	24
1	42	39	39	36	33	33	30
1-1/4	45	45	42	39	39	36	33
1-1/2	54	51	51	48	45	45	42
2	57	57	54	51	51	48	48
2-1/2	63	63	60	57	57	54	51
3	69	66	63	63	60	57	51
4	72	69	69	63	63	60	57
4-1/2	81	75	75	69	66	63	57
6	81	75	72	69	66	63	57
8	90	84	81	75	57	69	66
10	96	93	90	87	81	78	72