

- NOT ALL WIRES FROM FLYING LEADS ARE USED 1.
- 2. RED AND BLUE ARE POWER SUPPLY

NOTES:

- 3. GREY AND WHITE ARE CONTROL SIGNAL INPUT
- 4. BROWN AND WHITE ARE TRANSMITTER OUTPUT
- 10K RESISTOR SHALL BE USED FOR VOLTAGE TRANSMITTER, OR 250Ω RESISTOR FOR CURRENT **TRANSMITTER**
- USER CAN SETNO CONTROL" DEFAULT POSITION IN FIRMWARE SETTINGS (FAIL IN PLACE, OPEN, CLOSE) FOR 4-20mA, 1-5V, AND 2-10V CONTROL SIGNAL. STANDARD IS FAIL IN PLACE. THIS SETTING IS NOT POSSIBLE IF USING A CONTROL SIGNAL OF 0-20mA, 0-5V, OR 0-10V
- HEATER IS INTERNALLY WIRED & OPERATIONAL AS LONG AS ACTUATOR IS POWERED

